


SIDE-OPENING NESTBOX DESIGN

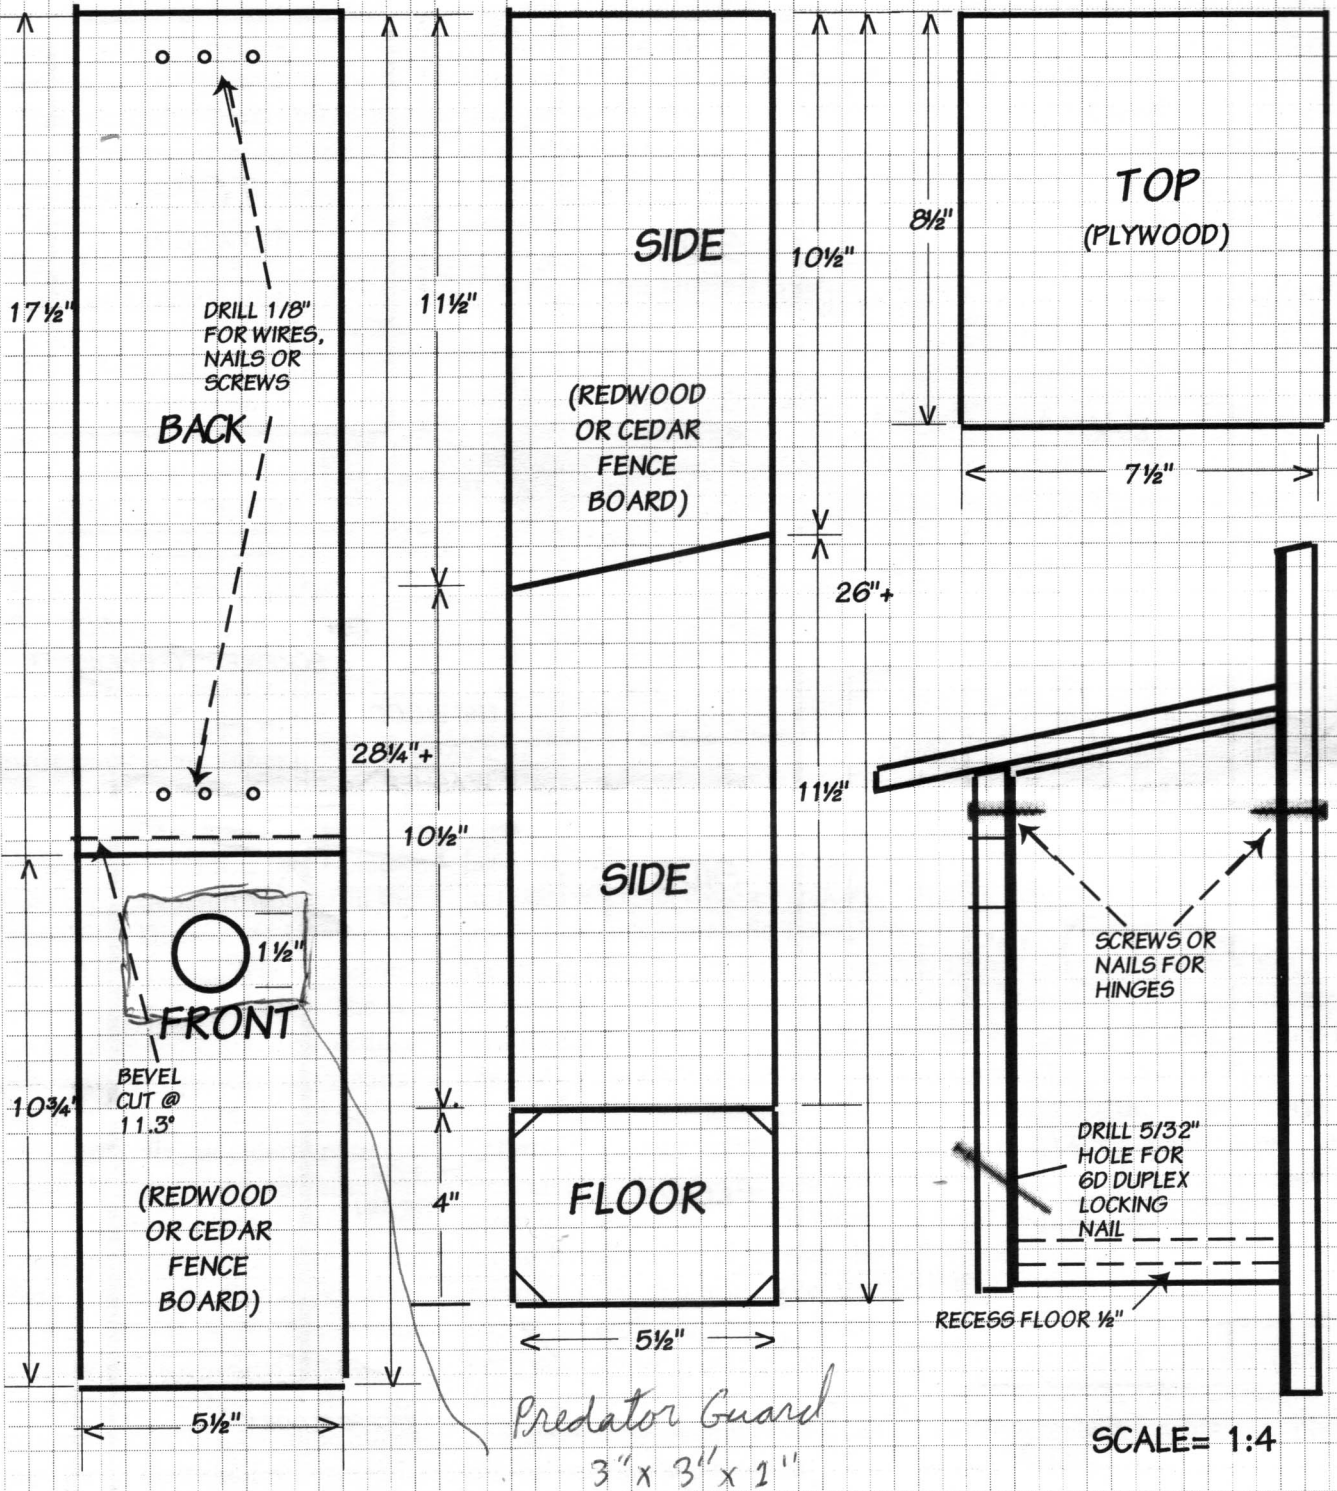

1 1/4" DRYWALL SCREWS; PREDRILL HOLES WITH 3/32" DRILL BIT; ALLOW AT LEAST 1/4" SPACE AT TOP OF BOTH SIDES TO VENT; CUT OFF CORNERS OF FLOOR FOR DRAINAGE; LOCKING NAIL GOES THROUGH FRONT AND INTO SIDE; EITHER SIDE CAN OPEN.